

170,000 BTU TENT HEATER

Start Up Instructions:

1. Connect the electrical cord to an approved electrical source. Use a 10-gauge extension cord. Plug in the thermostat.
2. Fasten propane supply line to 100 pound tank. Open tank valve.
3. Push selector switch to HEAT.
4. Set thermostat above room temperature-
 - The fan motor will start
 - Igniter will spark
 - Ignition occurs

The thermostat will cycle the heater on and off based on the set temperature.

(When the switch is set to HEAT, the four status lights will be activated in sequence as they are checked by ignition control. **If the heater does not light and a light is off**, refer to troubleshooting label on inside of heater's burner end access door.

Shut-Down Instructions:

1. Close the fuel supply valve.
2. Allow the heater to burn off any fuel remaining in the supply line.
3. Position selector switch to OFF.
4. Disconnect heater from gas and electrical supplies.

The most common operational problems are:

1. Improper extension cord
2. Thermostat not plugged in correctly.
3. Propane tank valve not open.
4. Propane tank incorrectly attached.
5. Reset button(s) behind access door(s) tripped.